

PowerMadd Sentinel Handguard Mounting Indian FTR 1200

NOTE: Use these instructions along with the instructions provided with the 34452 Sentinel handguard mount kit.

Clutch Side:

Loosen the clutch perch assembly and slide to the right just enough to make room for the mounting bracket. Mount the bracket over the top of the lever as shown in the photo. Adjust the height and width of the handguard to your preference using the instructions provided in the 34452 mount kit. Tighten all the fasteners.



Throttle Side:


Loosen the front brake perch and slide left (towards the center of motorcycle) just enough to make room for the mounting bracket. Mount the bracket over the brake lever, between the brake perch and throttle assembly as shown in the photo. Adjust the height and width of the handguard to your preference using the instructions provided in the 34452 mount kit. Tighten all the fasteners.



Sentinel LED light kit instructions Indian FTR 1200 34490

NOTE: Use these instructions along with the instructions provided in the Sentinel LED light kit (34490).

The location of the keyed power source on the FTR is located behind the head light. Remove the head light. The connector is taped to the wire harness. The arrow in photo is pointing to the connector. This connector has power only when the key is turned on and has a 5 amp fuse in the fuse box.

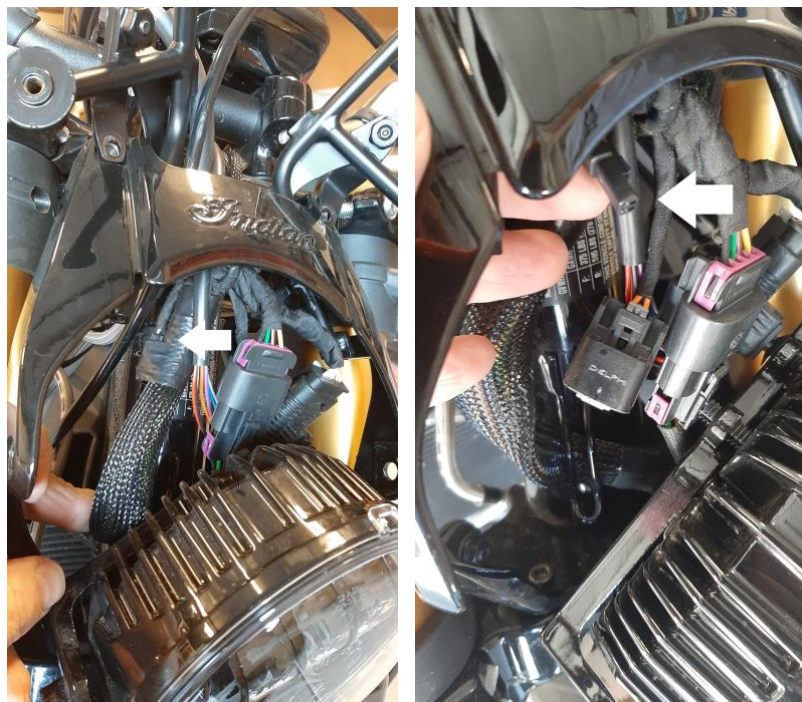

Connector A

The connector on your motorcycle is a male JST p/n 02R-JWPF-VSLE-S. See photo

Connector B

The matching connector that you will need is a female JST p/n 02T-JWPF-VSLE-S. You can type this part number into Ebay or Amazon and find these parts.

Use the instructions for the 34490 kit to complete the installation of you Sentinel LED light kit.

