



Mount Handguards - Sentinel

These instructions assume that you have already installed your Sentinel handguards using the ATV/Motorcycle Mounting Kit (34452).

STEP 1: You will need to drill a hole in the Sentinel Handguard somewhere in this area of the handguard (photo 1). The exact location varies depending on how you mounted your handguards. To find the location move the Hand Wrap that you just installed on the end of your bars up to the handguard and mark this location. Use a 1/4" drill bit to drill through the handguard using the marked location as a guide.

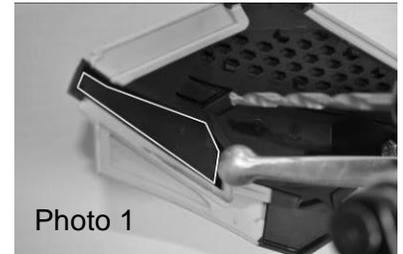


Photo 1

STEP 2: Attach the Sentinel Handguard to the bracket with a button head screw and 4mm hex wrench. Then tighten the clamp screw at the end of the bars until the brackets do not move. See photo 2.



Photo 2

Mount Handguards – Star Series

STEP 1: Place the Hand Wrap bracket in a vice so that you can hold the handguard in place to mark the location, see Photo 3. Drill a small hole (1/8") in the guard to mark the location.

STEP 2: Remove the handguard from the bracket and re-drill the hole to 1/4". Repeat for other handguard.

NOTE: Now you can assemble the mounting hardware – see instructions above.

STEP 3: Attach the handguards to the bracket with a button head screw and 4mm hex wrench. Then rotate the handguards to the final desired position and tighten the clamp screw until the brackets don't move.

STEP 4: Use the Star Series ATV/Motorcycle mounting kit (34252) to finish mounting the handguard to the handlebars. Choose the desired mounting location and follow the installation instructions from the handguard mounting kit to complete the installation, see Photo 4.

Helpful Hint: Attach the mounting bracket and strap to the handlebar first. Then flex the handguard to line up the holes in the mounting bracket to the mounting holes in the handguard.

Removing The Hand Wrap: To remove the clamp from inside the handlebars, first loosen the flat head screw 3 - 4 turns, then tap the head of the screw to push the cone further inside so the clamp will slide out.



Photo 3



Photo 4

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.