



PowerMadd Power-Lift

UNASSEMBLED PARTS:

TOOLS REQUIRED:

Qty Description

2- 1/2" Wrenches

- 1 Base
- 1 Center Post
- 2 Lynch Pin
- 1 Handle Assembly
- 2 Bolt
- 2 Nut

WARNING: The lynch pin in the handle linkage needs to be removed to operate the lift, but should be installed while the snowmobile is lifted to ensure that someone doesn't lower the snowmobile at the wrong time or by accident.


Be sure to check out the Handle Bar Cup! Attaches to the Power-Lift in seconds.



LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.

STEP 1: Attach the center post to the base using 2-short bolts and nuts supplied. Tighten them until there is no movement between the base and the center post.

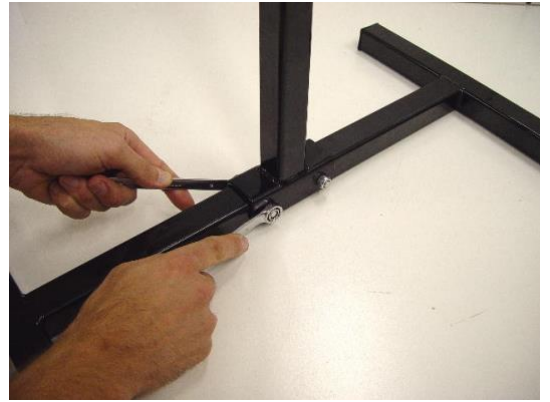

STEP 2: Slide the handle assembly into the center post and install the lynch pin through the hole to achieve the desired lift height.

