

# PowerMadd Sentinel Handguard mounting on a Yamaha Grizzly/Kodiak 2007 - Current

## Using the 34269 Tri-Mount

Remove reusable cable ties from the upsweep section of the handlebars to allow access around the wires and cables during installation. Reinstall after installation of the Sentinel handguards

Use these instructions along with the instructions provided with the 34269 mount kit.

### Right side:

Attach threaded bent rod to the Tri-mount bracket. Thread the duck bill mount all the way in.

Attach Tri-mount bracket and threaded bent rod assembly to the upsweep section of the handlebars. See photo 1 for proper location.

Attach handguard per instructions that came with your handguard and mount kit.

Adjustments can be made by spinning the Tri-mount bracket on the bars, by turning the threaded bent rod up or down and by twisting the duck bill handguard mount. Adjust so the guard is about in the position shown in the photo and or to your personal preference.



Photo 1



Photo 2

### Left side:

Attach threaded bent rod to the Tri-mount bracket. Thread the duck bill mount all the way in.

Attach Tri-mount bracket and threaded bent rod assembly to the upsweep section of the handlebars. See photo 3 for proper location. Note: to obtain the desired mounting location adjustment of the brake perch (up or down) and or spinning the angled brake line might be needed. To spin the brake line gain extra cable by pulling up slightly on the cable and then spin the angled section of the cable forward.

Attach handguard per instructions that came with your handguard and mount kit.

Adjustments can be made by spinning the Tri-mount bracket on the bars, by turning the threaded bent rod up or down and by twisting the duck bill handguard mount. Adjust so the guard is about in the position shown in the photo and or to your personal preference. Before and after adjusting handguard check that the brake is operational.



Photo 3



Photo 4

# PowerMadd Sentinel Handguard mounting on a Yamaha Grizzly/Kodiak 2007 - Current

## Using the 34452 ATV/MX mount kit

***For this mount kit to work on the Grizzly/Kodiak you will need to completely remove the welded tab from the right side of the bars located between the throttle block and brake perch as well as breaking off a section of the welded tab located on the left side of the bars between the brake perch and the control pod.***

Use these instructions along with the instructions provided with the 34452 mount kit.

### **Right side:**

Remove the throttle block and brake perch from the right side of the handle bar to give you access to the welded tab on the handlebars.

Remove the welded tab from the right side of the bars with a cold chisel and hammer. Once you have broken off the tab use a file to remove the excess metal and create a smooth surface for the handguard mounting bracket. You can also use a small amount of black spray paint to protect the exposed metal.

Reinstall the throttle block and brake.

Mount the handguard mounting bracket between the throttle

Block and brake perch with bracket going underneath the lever as shown in photo 7.

Mount bracket into mounting tabs on the handguard as shown in the photo 7.

Adjust guard, brake lever and throttle to your personal preference.

### **Left side:**

Use a cold chisel and a hammer and bend the welded tab away from the handlebars. Use a pliers and break off the tab. You can leave the remaining tab on the bars as shown in photo 8.

Mount the handguard mounting bracket between the brake perch and control pod with the bracket going over the top of the lever as shown in photo 9.

Mount bracket next to the left mounting tab on the handguard. See photo for reference

Adjust guard, brake lever and throttle to your personal preference.



Photo 5

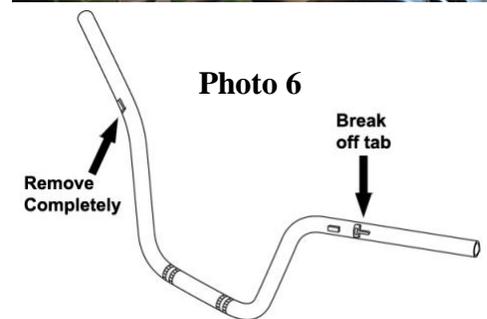


Photo 6



Photo 7

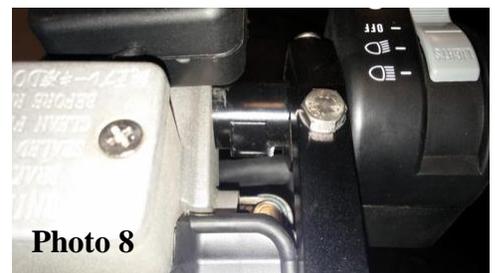


Photo 8



Photo 9