


## Sentinel LED light kit instructions Can Am Outlander 34490

**NOTE:** Use these instructions along with the instructions provided in the Sentinel LED light kit (34490).

Remove the front and rear panels that surround the handlebars. See photos

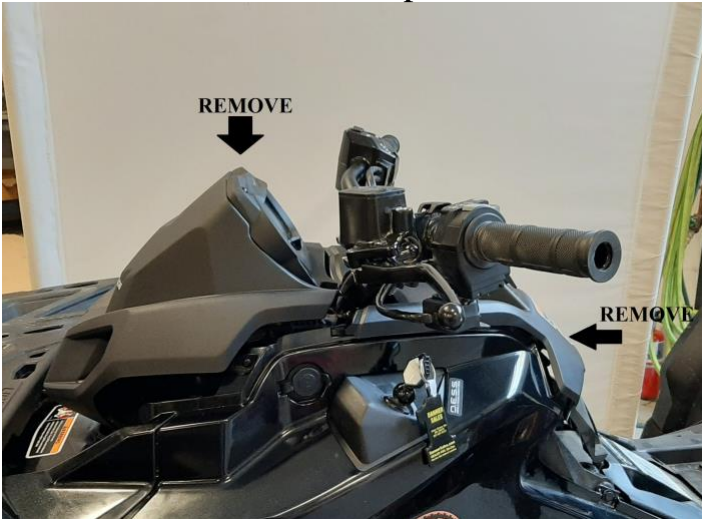

There are two keyed power locations underneath the front hood. Choose the one that best suits your installation.

