

PowerMadd Sentinel Handguard mounting on Polaris Matryx chassis 2021 and up

Use 34456 Stealth Mount kit


Note: Check your windshield height as the handguards may hit the windshield on Mid and taller windshields

* Use these instructions along with the instructions provided in the 34456 mount kit

Brake side:

Loosen brake perch and move to the left so it sits right next to the controls. Mount handguard bracket right next the brake perch and run the bracket underneath the brake reservoir.

Adjust guard and brake lever to your personal preference.
Tighten down all fasteners

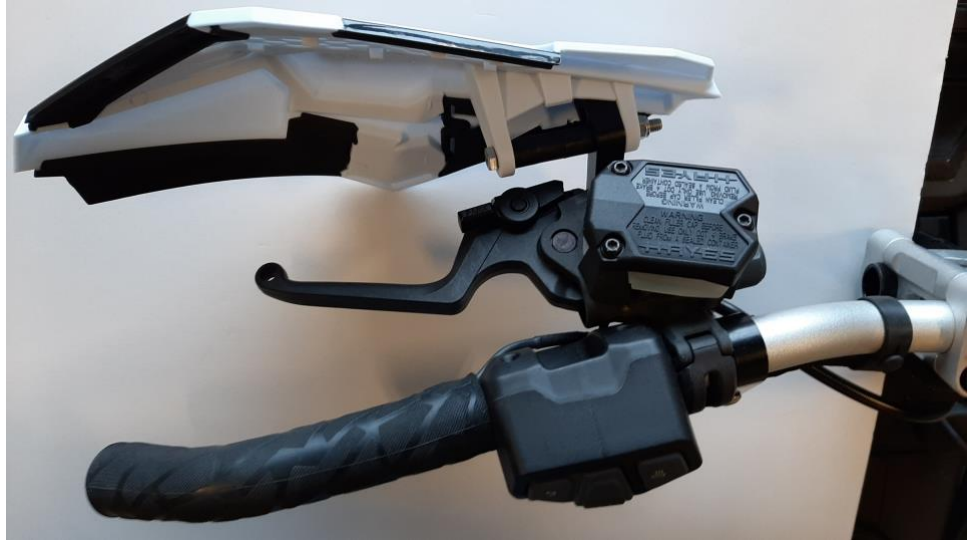

Throttle side:

Loosen kill switch and slide to the left. Mount bracket between kill switch and throttle block as shown in photo.

Adjust handguard, throttle lever and kill switch to your personal preference. Tighten down all fasteners.

