

Handguard Mounting Tips For Ski Doo REV 2003 - 2008

34269 Tri-Mount

Remove any cable ties from the upsweep section of the handle bars to allow access around the wires and cables during installation. Reinstall after installation of the Sentinel handguards

The 34269 TriMount is required for the REV's with the handlebar mounted windshields.

Use these instructions along with the instructions provided with the 34269 mount kit.

Right side:

Attach threaded bent rod to the mirror mount bracket.
Position the duck bill mount all the way in.

Attach mirror mount bracket and threaded bent rod assembly to the upsweep section of the handle bars. See photo for proper location.

Attach handguard per instructions that came with your handguard and mount kit.

Adjustments can be made by spinning the mirror mount bracket on the bars, by turning the threaded bent rod up or down and by twisting the duck bill handguard mount. Adjust so the guard is about in the position shown in the photo and or to your personal preference.




Left side:

Attach threaded bent rod to the mirror mount bracket.
Position the duck bill mount all the way in.

Attach mirror mount bracket and threaded bent rod assembly to the upsweep section of the handle bars. See photo for proper location.

Attach handguard per instructions that came with your handguard and mount kit

Adjustments can be made by spinning the mirror mount bracket on the bars, by turning the threaded bent rod up or down and by twisting the duck bill handguard mount. Adjust so the guard is about in the position shown in the photo and or to your personal preference. Before and after adjusting handguard check that the brake and parking brake are operational.

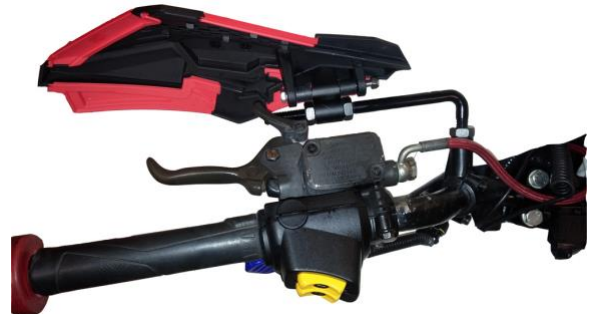

34450 Snowmobile mount kit

This mount kit will only work on REV's that do not have the handlebar mounted windshield.

Use these instructions along with the instructions provided with the 34450 mount kit.

Right side:

Mount the handguard mounting bracket just to the left throttle block as shown in the photo.

Mount bracket into mounting tabs on the handguard as shown in the photo.

Adjust guard and throttle to your personal preference.



Left side:

Mount the handguard mounting bracket just to the right of the brake perch with the bracket going over the top of the lever as shown in the photo.

Mount bracket in the hand guard tabs as show in the photo.

Adjust guard and brake lever to your personal preference.

Before and after adjusting handguard check that the brake and parking brake are operational.

