



# Tri-Mount

## Installation Instructions for Part No. 34269

### HARDWARE INCLUDED:

Qty	Description
2	Rod Mount
2	Handle Bar Mount
	-17mm wrench
2	Duckbill Spacer
6	10mm Nut
2	6mm Lock Nut
2	6mm Bolt
4	Washers

### SENTINEL HARDWARE

Qty	Description
2	M6 x70mm bolts
4	13mm Spacers

(SEE NOTE BELOW)

### TOOLS REQUIRED:

- 4mm hex wrench
- 10mm wrench

### READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION!

**NOTE:** PowerMadd's Tri-mount is designed to mount to the upward sweep section of your handle bars (see the Figure 1).

**STEP 1:** Thread the rod mount into the handle bar mount. Do not tighten yet, you will need to adjust this later.

**STEP 2:** Install the handle bar mount onto the upward sweep of your bars (see Figure 1).

**STEP 3:** Remove the 6mm lock nut and 6mm bolt from the Duckbill spacer. The Duckbill spacer goes between the two mounting tabs of your handguard. Mount the handguard as shown in Figure 2. Slide the 6mm bolt through both the handguard tabs and Duckbill spacer. Do not install lock nut yet. There are more adjustments to be made.

**STEP 4:** Position the handle bar mount so that the spine of the handguard is close to parallel with your hand grips and with enough space to operate your levers. This can be accomplished by moving the handle bar mount up and down on your handle bars and twisting on your handle bars and by rotating the rod mount up and down. Once you get the handguards where you want them, tighten the handle bar mount with a 4mm hex wrench. Then tighten the 10mm nut on the rod mount against the bar mount using a 17mm wrench so the rod is locked into place.

**STEP 5:** Position the handguard so that the end of the handguard is even with the end of your handle bars. You can also adjust the tilt of the handguard to your personal taste. This can be accomplished by spinning the two 10mm nuts and Duckbill spacer in or out as needed. (You will need to remove your handguard to do this) Once you have your adjustments, tighten the two 10mm jam nuts with 17mm wrenches. Install the handguard as you did in step 3 but this time install the 6mm lock nut and tighten with 10mm wrench. Repeat step 5 for both sides.

**Note:** All fasteners may need to be re-tightened after the first ride. Check the tightness of the mount and handguard before each ride.

**SENTINEL MOUNTING:** When installing the Sentinel Handguards with the Tri-mount, use the supplied bolts and spacers shown in Figure 3.

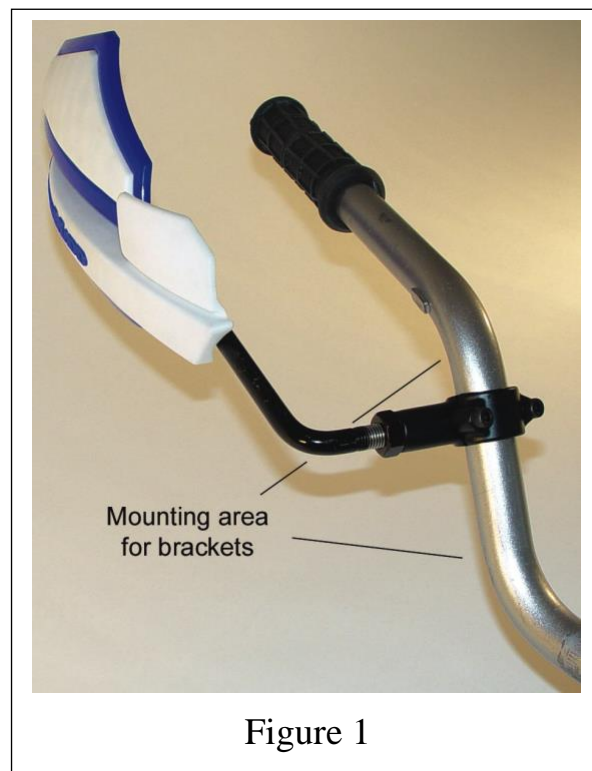


Figure 1



Figure 2

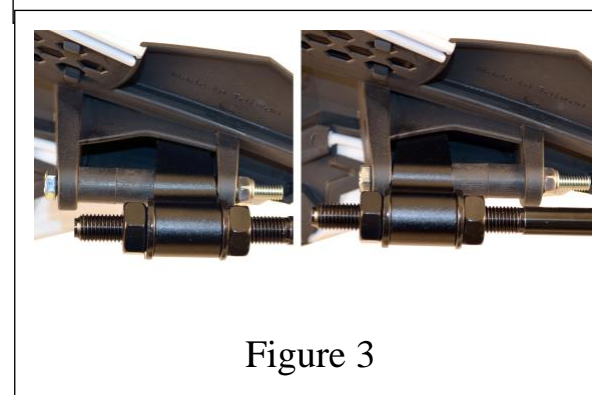


Figure 3

### LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.



# Tri-Mount

## Installation Instructions for Part No. 34269

### HARDWARE INCLUDED:

Qty	Description
2	Rod Mount
2	Handle Bar Mount
	-17mm wrench
2	Duckbill Spacer
6	10mm Nut
2	6mm Lock Nut
2	6mm Bolt
4	Washers

### SENTINEL HARDWARE

Qty	Description
2	M6 x70mm bolts
4	13mm Spacers

(SEE NOTE BELOW)

### TOOLS REQUIRED:

- 4mm hex wrench
- 10mm wrench

### READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLATION!

**NOTE:** PowerMadd's Tri-mount is designed to mount to the upward sweep section of your handle bars (see the Figure 1).

**STEP 1:** Thread the rod mount into the handle bar mount. Do not tighten yet, you will need to adjust this later.

**STEP 2:** Install the handle bar mount onto the upward sweep of your bars (see Figure 1).

**STEP 3:** Remove the 6mm lock nut and 6mm bolt from the Duckbill spacer. The Duckbill spacer goes between the two mounting tabs of your handguard. Mount the handguard as shown in Figure 2. Slide the 6mm bolt through both the handguard tabs and Duckbill spacer. Do not install lock nut yet. There are more adjustments to be made.

**STEP 4:** Position the handle bar mount so that the spine of the handguard is close to parallel with your hand grips and with enough space to operate your levers. This can be accomplished by moving the handle bar mount up and down on your handle bars and twisting on your handle bars and by rotating the rod mount up and down. Once you get the handguards where you want them, tighten the handle bar mount with a 4mm hex wrench. Then tighten the jam nut on the rod mount against the bar mount using a 17mm wrench so the rod is locked into place.

**STEP 5:** Position the handguard so that the end of the handguard is even with the end of your handle bars. You can also adjust the tilt of the handguard to your personal taste. This can be accomplished by spinning the two jam nuts and Duckbill spacer in or out as needed. You will need to remove your handguard to do this. Once you have your adjustments, tighten the two 10mm jam nuts with 17mm wrenches. Install the handguard as you did in step 3 but this time install the 6mm lock nut and tighten with 10mm wrench. Repeat the same steps for the other side and you're done.

**Note:** All fasteners may need to be re-tightened after the first ride. Check the tightness of the mount and handguard before each ride.

**SENTINEL MOUNTING:** When installing the Sentinel handguards with the Tri-mount, use the supplied bolts and spacers shown in Figure 3.

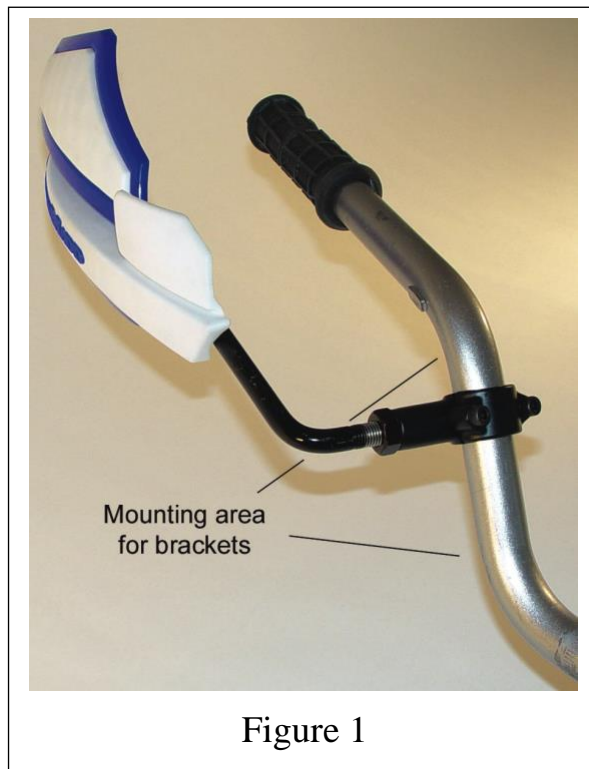


Figure 1



Figure 2

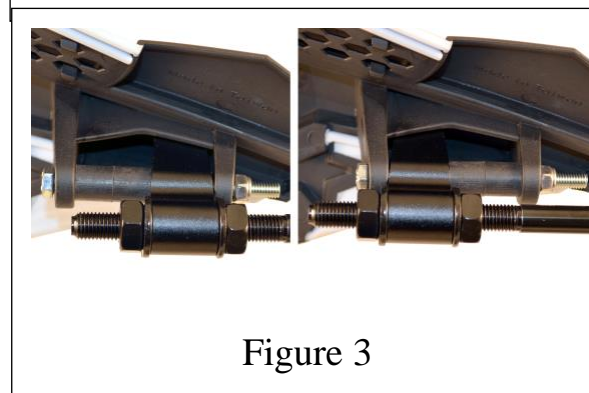


Figure 3

### LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.