




## Universal Fat Bar Adaptor – 44257

### PARTS INCLUDED:

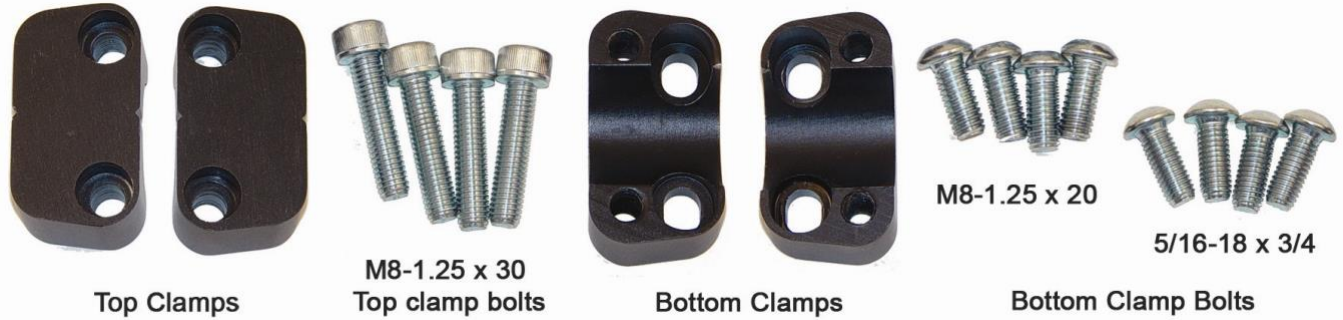


TOOLS NEEDED: 3/16 hex wrench, 5mm hex wrench, 6mm hex wrench

**STEP 1:** Remove existing 7/8" handlebars and clamps from your machine.

**STEP 2:** Mount the bottom clamps using either the M8-1.25 x 20 or 5/16-18 x 3/4 button head cap screws. Tighten to 18 foot pounds of torque.

**STEP 3:** Place oversize (fat) bar into the bottom clamps. Place top clamp with two M8-1.25 x 35 bolts over bar and finger tighten bolts. Do the same for the other top clamp. Adjust bars to desired position and tighten top clamp bolts to 18 foot pounds of torque.

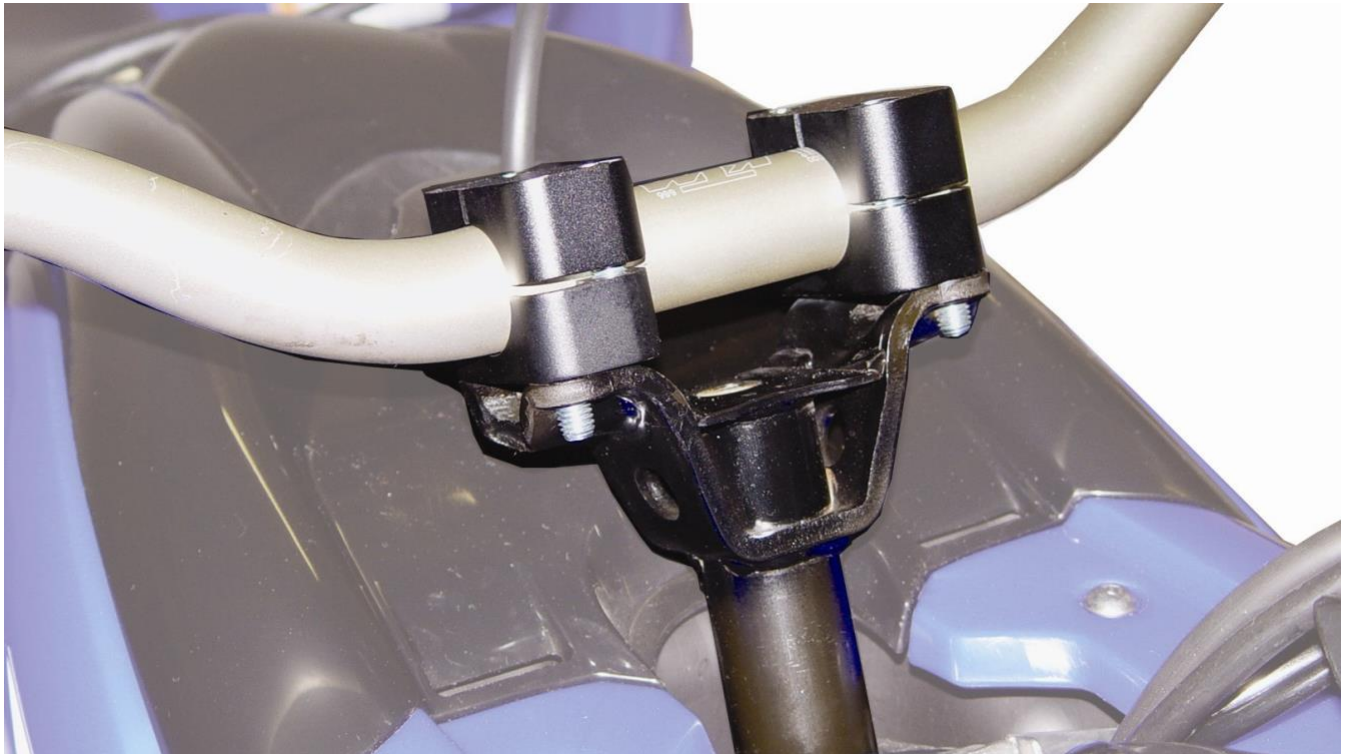

### Limited Warranty

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.

