POWERMADD®

Polaris ProTaper Riser Kits

Installation Instructions for Part No. 45489,45490,45491

TOOLS REQUIRED:

- 5mm Allen Wrench
- 10mm Wrench


HARDWARE INCLUDED:

Qty Description

- 1 Riser Block
- 4 SHCS M6 Bolts
- 4 M6 Flange Nuts

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION!

- STEP 1: Remove handlebars by removing the four bolts and nuts from the handlebar clamp. Keep all controls, wiring, cables, etc... connected to the handlebars and lay them forward. (Photo 1)
- STEP 2: Place the POWERMADD riser block on the steering post. Place the Polaris bottom clamp on top of the PowerMadd riser block. Lay handlebar into the bottom clamp then place top handlebar clamp on top of handlebars. (Photo 2)

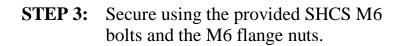


CAUTION: Be sure that the handlebars do not hit the gas tank or any other part of the machine when turned fully to the left or right. Check to see that the controls and your hands will not hit the windshield while turning right or left. Also check to see if the throttle cable is long enough by turning the handlebars fully right and left and making sure that the throttle lever doesn't activate.

STEP 4: With the handlebars in the desired position, torque the four bolts to 13 foot pounds. (Photo 3)

WARNING: Improper adjustment of the handlebars, or torque of the bolts, can cause limited steering or loosening of the handlebars resulting in loss of vehicle control. Loss of vehicle control could result in severe injury or death.





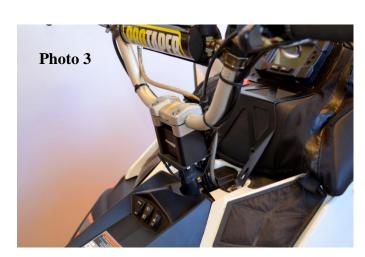

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effective for one year from the original purchase date.

PowerMADD® 651-462-8465