

Polaris RZR XP Front Fender Flare Kit 62003

Before you begin, read these instructions and check to be sure all parts and tools are accounted for.

Kit Components:

Qty.	Part Description	Tools required for installation:
1	Front Fender Flares (pair)	4mm Allen
8	Pan Head Screw M6x15mm	T-40 Torx
4	Machine Screw M5x25mm	1/4" Drill Bit
8	6mm Flange Nut	3/8" Drill Bit
4	5mm Well Nut	Phillips Screwdriver
4	#10 Fender Washer	10mm wrench



Fitment: 2014 to 2019 Polaris RZR XP, RZR 4 XP, TURBO (60"-64"):


2015 -2019 RZR S models 60"

2015 - 2019 RZR 4 900 eps 60"

INSTALLATION INSTRUCTIONS – Front Passenger Side

NOTE: Reference illustration for holes and panels. The assembly is in alpha-numeric order (refer to diagram).


1. Secure vehicle and turn front wheels all the way to the right!
2. Panel A/Hole 1 utilizes an existing fastener. Remove the bolt using a T-40 Torx driver and install fender flare and lightly tighten! (**See Photo 1**)
3. Holding panel A in place, making sure the outer edge of the fender aligns with the raised edge of the fender flare. Mark and drill hole A2 using a 1/4" drill bit. Insert a short pan head screw and flange nut and lightly tighten!
4. Holding panel A in place, making sure the edge of the fender lines up with the raised edge of the fender flare. (**See Photo 2**) Mark and drill hole A3 using a 1/4" drill bit. Insert a short pan head screw and flange nut and lightly tighten!
5. Hold panel B in place, making sure the edge of the fender matches up with the raised edge of the fender flare. (**See Photo 3**) Mark and drill hole B1 and B2 using a 1/4" drill bit. Insert a short pan head screw and flange nut and lightly tighten!
6. Holding panel B in place, making sure the edge of the fender lines up with the raised edge of the fender flare. Mark and drill hole B3 using a 3/8" drill bit. Place a well nut into the hole and with the long pan head screw and washer lightly tighten!
7. Holding panel C in place, line up the three slots under the OEM fender mark and drill hole C1 using a 3/8" drill bit. (**See Photo 4**) Place a well nut into the hole and with the long pan head screw and washer lightly tighten!
8. Make sure the fender flare is completely lined up and tighten all fasteners
9. Repeat these instructions for the opposite side.

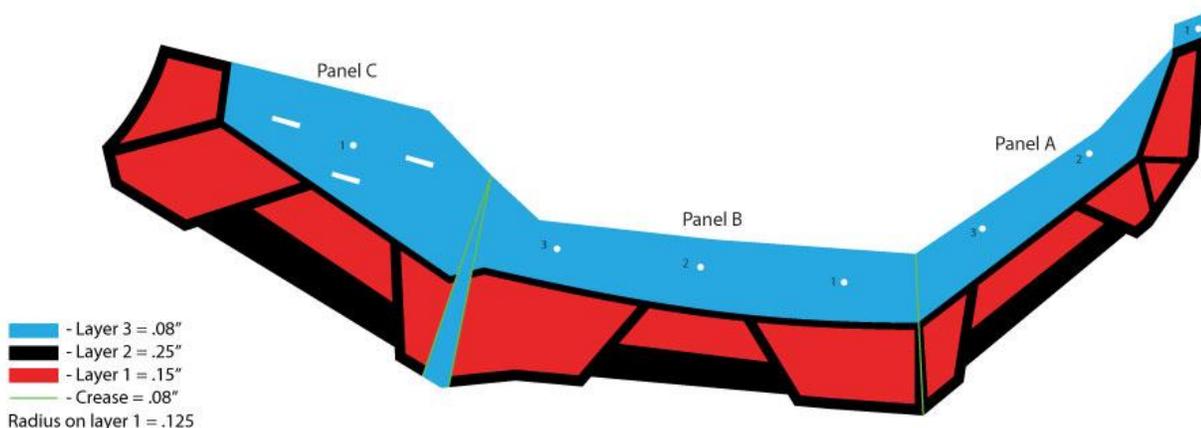

Polaris RZR XP Front Fender Flare Kit 62003



Photo 1

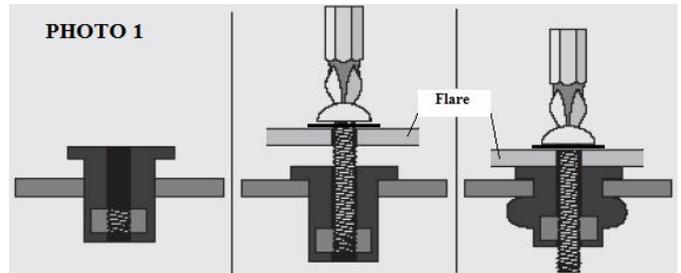

Place Well-Nut insert all the way into pre-drilled hole until flange is firmly against mounting surface.

2. Pass machine screw through part to be fastened.

3. Tighten until snug. Do not over tighten. The rubber will crack.

Well Nut Diagram



Photo 2



Photo 3



Photo 4

LIMITED WARRANTY

PowerMadd guarantees its products against defects in material and workmanship for a period of twelve (12) months from the original date of purchase. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.